The Amazing Twist Crimp™ Connector

with Omniflex® Insulator

Strong, high integrity termination on any Monster speaker cable in seconds.

Instructions

1. Expose approximately 1/2" of copper stranding and twist to form a slight point.

2. Tear off insulator to size and slide it down the cable.

3. ***THINK COUNTER CLOCKWISE.***

Twist the connector counter clockwise until you feel the internal threads cut into the cable. Twist farther then you think is necessary to ensure a tight fit.

4. Snap the insulator in place with the smooth surface toward the top.

Helpful Hints

1. When reusing Twist Crimp™ make sure the internal threads are clean. Dislodge broken pieces of copper stranding in the threading by hitting the connector on a hard surface.

2. When Twist Crimping Original Monster Cable®, Monster XP® or Superflex®, pinch the end of the insulation to prevent the conductors from turning inside the clear jacketing.

3. On all cables with a Magnetic Flux Tube®, it is necessary to remove the Flux Tube before twisting on the connector.

(See Connector Diagram on Reverse Side)

MONSTER CABLE®
Advancing the Art of Listening

© Monster Cable Products, Inc.
455 Valley Drive
Brisbane, CA 94005
(415) 840-2000 P/N 108585 ver 2.6

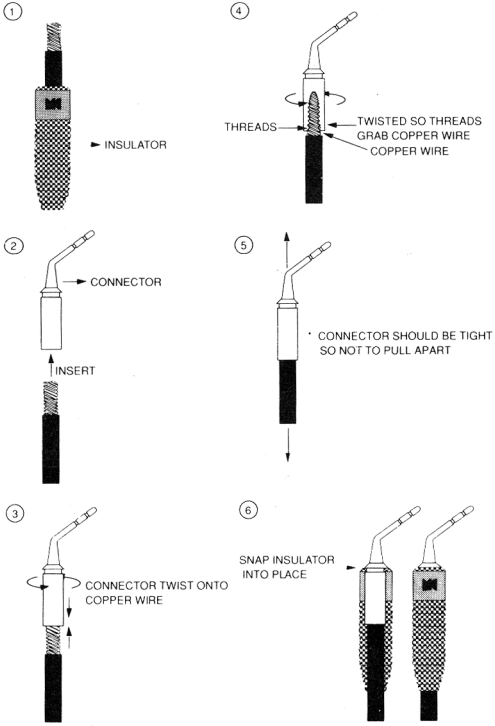
1
INSULATOR
2
CONNECTOR
INSERT
3
CONNECTOR TWIST ONTO
COPPER WIRE
4
THREADS
TWISTED SO THREADS
GRAB COPPER WIRE
COPPER WIRE
5
CONNECTOR SHOULD BE TIGHT
SO NOT TO PULL APART
6
SNAP INSULATOR
INTO PLACE